


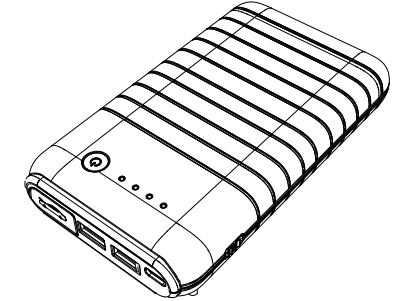















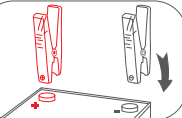
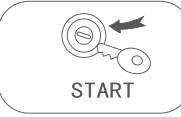
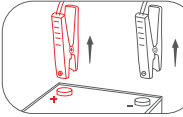
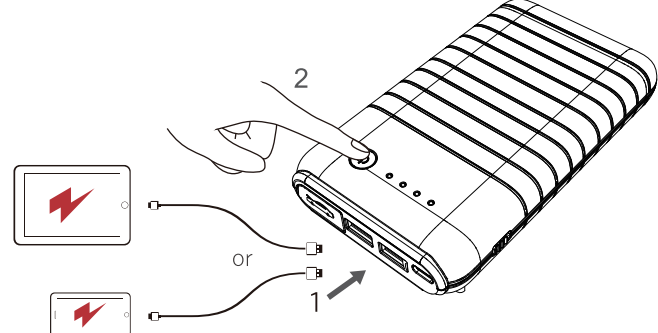
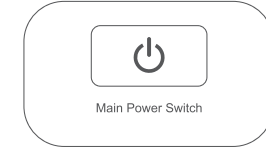
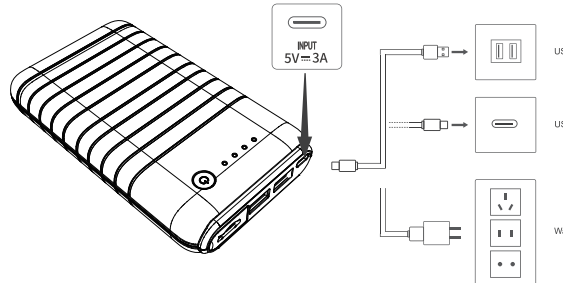



 


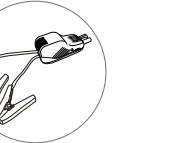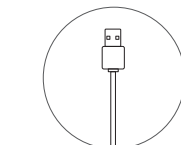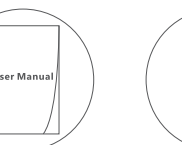





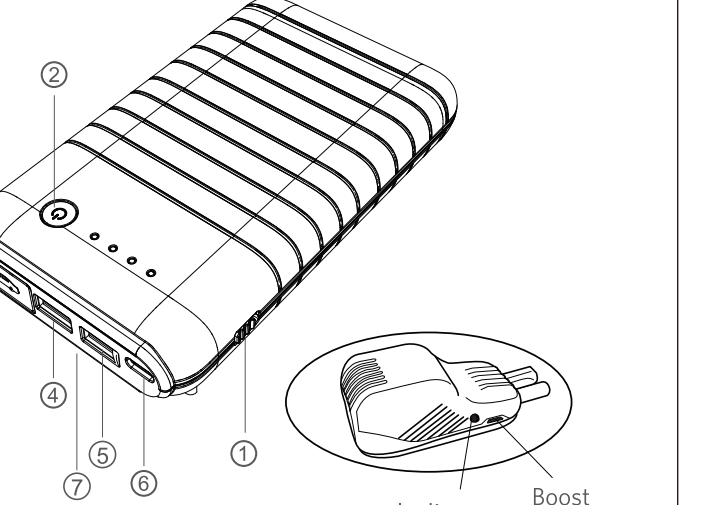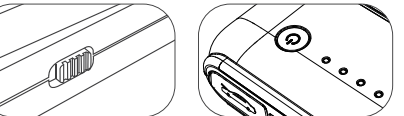



<div><div>TENKER</div><div>User Manual</div><div>Portable Car Jump Starter</div><div></div><div>500A 10800mAh</div><div>For petrol engines below 3.0L and diesel engines below 2.0L</div></div>	<div><div>support@tenker.co</div><div>1-855-558-8666(24 hours Mon-Fri)</div><div>www.tenker.co</div></div>	<div><div>www.tenker.co</div><div>Attention</div><div><div><div>1. This device applies to petrol engines up to 3.0L and diesel engines up to 2.0L. Please don't start a vehicle with a higher engine capacity or it will cause serious damage to the device and could be dangerous to the user.</div><div>2. Don't crank the engine for more than 3 seconds. Allow the jump starter to cool down for at least 1 minute after each start.</div><div>3. Your jump starter will work best when it is fully charged. If less than 50% charged, it will not be able to start your engine.</div><div>4. Clear the dust on the electrodes of your car battery before jump starting.</div><div>5. If the instructions are followed correctly but your vehicle doesn't start instantly, please wait for 5-10 minutes and try again. But please don't make repeated attempts to jump start the engine without allowing time for the device to cool down.</div><div>6. Do not connect the positive and negative polarity together when it's power on.</div><div>7. Separate the cables from the jump starter when they are not being used.</div><div>8. It is prohibited to charge the device immediately after a jump start. Please wait at least 30 minutes if you want to charge the device after a jump start.</div><div>9. To preserve lifespan, recharge the device at least once every 3 months.</div><div>10. Use original or certified cables.</div><div>11. Do not expose the jump starter to liquids. Do not disassemble.</div><div>12. Avoid dropping the device and exposing it to extreme temperatures.</div></div><div><div>» 1</div></div></div></div>	<div><div>www.tenker.co</div><div>Specifications</div><table><tr><td> Capacity</td><td>10800mAh/ 39.96Wh</td></tr><tr><td> Weight</td><td>320g/11.3oz</td></tr><tr><td> Size</td><td>145x 82 x 25mm/ 5.7x 3.2 x 0.98inch</td></tr><tr><td> Input(Output)</td><td>5V/3A</td></tr><tr><td> Output</td><td>QC3.0 5V/2.1A</td></tr><tr><td>Jumping Peak Output Current</td><td>500A</td></tr><tr><td>Jumping Start Output Current</td><td>250A</td></tr><tr><td>Operation Temperature Range</td><td>-20°C- 60°C/ -4°F- 140°F</td></tr></table><div><div>Accessories</div><div><div> 1 x Jump Starter</div><div> 1 x Intelligent Jumper Clamps</div><div> 1 x Type-C Line</div><div> 1 x User Manual</div><div> 1 x Storage Package</div></div></div><div><div>» 2</div></div></div>	 Capacity	10800mAh/ 39.96Wh	 Weight	320g/11.3oz	 Size	145x 82 x 25mm/ 5.7x 3.2 x 0.98inch	 Input(Output)	5V/3A	 Output	QC3.0 5V/2.1A	Jumping Peak Output Current	500A	Jumping Start Output Current	250A	Operation Temperature Range	-20°C- 60°C/ -4°F- 140°F	<div><div>www.tenker.co</div><div>At a Glance</div><div></div><div><div>1. ON/ OFF Button</div><div>2. Power Supply Switch</div><div>3. Jumping Port</div><div>4. Output 5V/2.1A</div><div>5. Output QC 3.0</div><div>6. USB Type-C Input/ Output Port</div><div>7. LED Flashlight (High/SOS/Strobe)</div></div><div><div>Indicator Light</div><div>Boost Button</div></div></div> <div><div>» 3</div></div>	<div><div>www.tenker.co</div><div>Operation Guide</div><div>1. How to jump start a car?</div><div>Step1: Turn on the main switch & power button before using and make sure it is over 50% charged (please charge it fully before the first time use).</div><div></div><div>Step 2: Insert jumper cables into jumping port. The indicator light will flash red and green alternately.</div><div></div><div>Step 3: Connect the red clamp to the positive(+) terminal and the black clamp to the negative(-) terminal of the car battery. The indicator light will turn green. If it flashes red and green alternately, press the "booster" button next to the light for 3 seconds which will turn it green. This status will continue for 30 seconds to allow you to start the car. After that time, please repeat the previous steps (press the booster button) again to start the car.</div><div></div><div><div>» 4</div></div></div>	<div><div>www.tenker.co</div><div>Step 4: Start the car</div><div></div><div>Step 5: Remove clamps and pack away.</div><div></div><div>2. How to Charge Phones and Tablets?</div><div></div><div>3. How to use LED flashlight?</div><div></div><div><div>» 5</div></div></div>	<div><div>www.tenker.co</div><div><div>① Long press this button for 3s to turn on high mode (steady on);</div><div>② Then short press the button, shift to the SOS mode (slow flickering);</div><div>③ Short press again, shift to Strobe mode (fast flickering);</div><div>④ Short press again, turn off the LED flashlight.</div></div><div>4. How to charge the jump starter?</div><div>Insert the wall charger cable into the 5/3A Power Input Interface. Insert the other end into the 110-240V power.</div><div></div><div>Note: it is highly recommended to charge the device with an AC power adapter or wall charger plug (not included in the package) to get the fastest charging speed (universal cellphone charge adapter is compatible).</div><div><div>» 6</div></div></div>	<div><div>TENKER</div><div><div><div> 3-year limited warranty</div><div> Lifetime technical support</div></div><div><div> support@tenker.co</div><div> 1-855-558-8666(24 hours Mon-Fri)</div><div> www.tenker.co</div></div></div><div><div>    Made in China</div></div></div>
 Capacity	10800mAh/ 39.96Wh																							
 Weight	320g/11.3oz																							
 Size	145x 82 x 25mm/ 5.7x 3.2 x 0.98inch																							
 Input(Output)	5V/3A																							
 Output	QC3.0 5V/2.1A																							
Jumping Peak Output Current	500A																							
Jumping Start Output Current	250A																							
Operation Temperature Range	-20°C- 60°C/ -4°F- 140°F																							