
## **TEKKER**

# **User Manual**

Portable Car Jump Starter

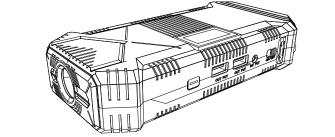

600A 14000mAh

For petrol engines below 5.0L and diesel engines below 3.5L

- 1. This device applies to petrol engines up to 5.0L and diesel engines up to 3.5L. Please don't start a vehicle with a higher engine capacity or it will cause serious damage to the device and could be dangerous to the user.
- 2. Don't crank the engine for more than 3 seconds. Allow the jump starter to cool down for at least 1 minute after each
- 3. Your jump starter will work best when it is fully charged. If less than 30% charged, it will not be able to start your engine. 4. Clear the dust on the electrodes of your car battery before
- Jumping Start Output Current 400A 5. If the instructions are followed correctly but your vehicle Operation Temperature Range | -20°C-60°C/-4°F-140°F doesn't start instantly, please wait for 5-10 minutes and try
- again. But please don't make repeated attempts to jump start the engine without allowing time for the device to cool down. 6. Do not connect the positive and negative polarity together

www.tenker.co

 
- when it's power on. /. Separate the cables from the jump starter when they are not
- 8. It is prohibited to charge the device immediately after a jump start. Please wait at least 30 minutes if you want to charge the device after a jump start.
- 9. To preserve lifespan, recharge the device at least once every 3
- 10. Use original or certified cables.
- support@tenker.co 11. Do not expose the jump starter to liquids. Do not disassemble. 12. Avoid dropping the device and exposing it to extreme
- (S) 1-855-558-8666(24 hours Mon-Fri)

www.tenker.co

Capacity 14000mAh/51.8Wh /kG\ Weight 550g/19.4oz Size 169x 85 x 36mm/ 6.7x 3.4 x 1.4inch USB Output Smart 5V/2.4A; Smart 5V/2.4A Jumping Peak Output Current 600A











 1.ON / OFF Button 4.LCD Screen 5.USB Outputs




www.tenker.co

## How to Jump Start Your Car

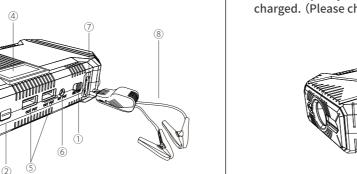


www.tenker.co


2. Insert jumper cables into jumping port. The indicator light Start your engine.

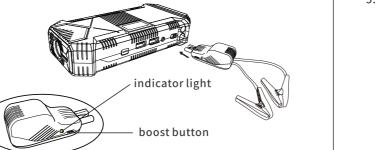

1. Turn on your jump starter and make sure it's over 30%

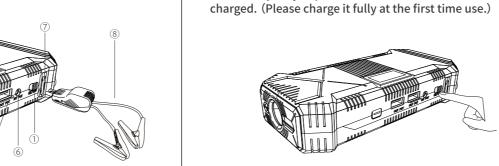


will flash red and green alternately.

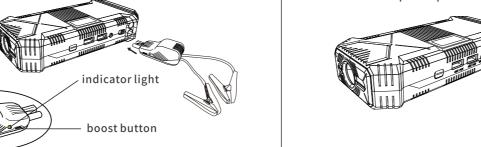

www.tenker.co

www.tenker.co

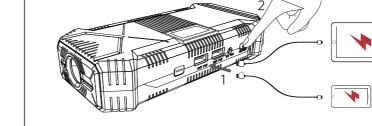

1.Hold to turn on / off.





3. Connect the red clamp to the positive(+) terminal and the

black clamp to the negative(-) terminal of the car battery. The

indicator light will turn green. If it flashes red and green

alternately, press the "booster" button next to the light for 3


seconds which will turn it green. This status will continue fo

 
30 seconds to allow you to start the car. After that time, please

repeat the previous steps (press the booster button) again to




www.tenker.co

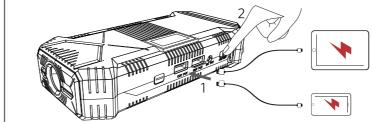




 2. Press to toggle flash modes. Quick press once to change LED flash modes (high, strobe, SOS).



www.tenker.co


## How to Recharge The Device

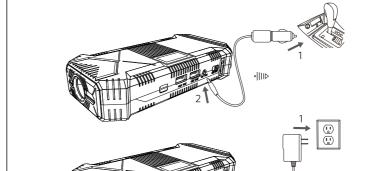

**TENKER** 





 



Made in China

support@tenker.co (S) 1-855-558-8666(24 hours Mon-Fri) www.tenker.co