

**FRESH
KEEP**

INSTRUCTION
MANUAL

KOIOS



CONTACT US

Please send 'VS2233' to us by scanning the below QR-code.
(Instant reply):



☎ 1-855-558-8777
✉ support@mykoios.com
🌐 www.mykoios.com

INTRODUCTION

Thank you for purchasing our KOIOS VS2233 vacuum sealer. This appliance is designed to meet ETL standard for 120v. 60 Hz 110w appliances. Please read the user manual carefully and keep it in a safe place for future reference. Please contact us by email at support@mykoios.com if you need any assistance.

Package Contents

1. Vacuum sealer
2. Warranty Card
3. User Manual
4. Tube
5. Vacuum sealer bags
6. CReva

Warranty Customer Support

For questions, assistance, support. or warranty claims, please contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon orders: support@mykoios.com

Please note: mykoios.com can only provide after-sales service for products purchased directly from mykoios.com. If you have purchased from a different seller. please contact them directly for service or warranty issues.


PRODUCT SPECIFICATIONS

Product Specification	VS2233
Rated voltage(V)	120V 60Hz
Rated power	110W
Pump capacity	12L/minute
Sealing time	15 seconds
Max Working width	30cm
Vacuum power (DRY& NORMAL setting)	-0.85bar max
Noise(1.0m distance)	≤80dB
Product dimensions	14.56*5.90*2.91inch 37*15*7.4cm
Packing dimensions	15.74*4.13*7.28inch 40*10.5*18.5cm
Net weight	1.3KG
Gross weight	1.6KG

PRODUCT SPECIFICATIONS

1. cover Lock: On the left and right side of the one-key press cover.
2. Indicator Lamp: Indicates the status of vacuum or sealing process.
3. Sealing Strip: Contains a heating wire covered with Teflon which allows the bag to seal but not stick to the strip.
4. Sealing Gasket: Press the bag onto the sealing gasket.
5. Vacuum Surface: Draws air out of bag and stops liquid overflowing.
6. Airtight Seal: Prevents leakage during the vacuum process.

FUNCTION BUTTONS INTRODUCTION

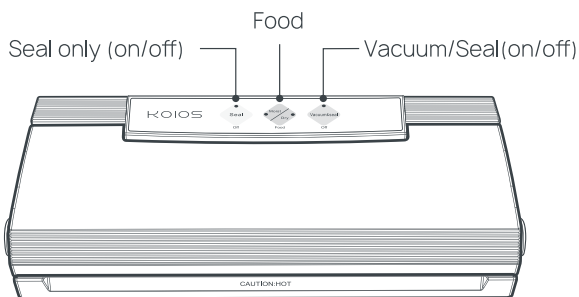

1. Vacuum/Seal (on/off)

Draws air out of the bag and automatically seals the bag after vacuuming is complete.

2. Seal only (on/off)

Seals bags without vacuuming or halts the sealing action whenever you want to stop the operation.


3. Food

Dry button: For dry bags and items without moisture; has a shorter heat-sealing time.

Moist button: For wet bags or foods with a little moisture; has a longer heat-sealing time.

Note: The default setting is set for dry bags and shorter heat-sealing time.

PRODUCT DIAGRAM

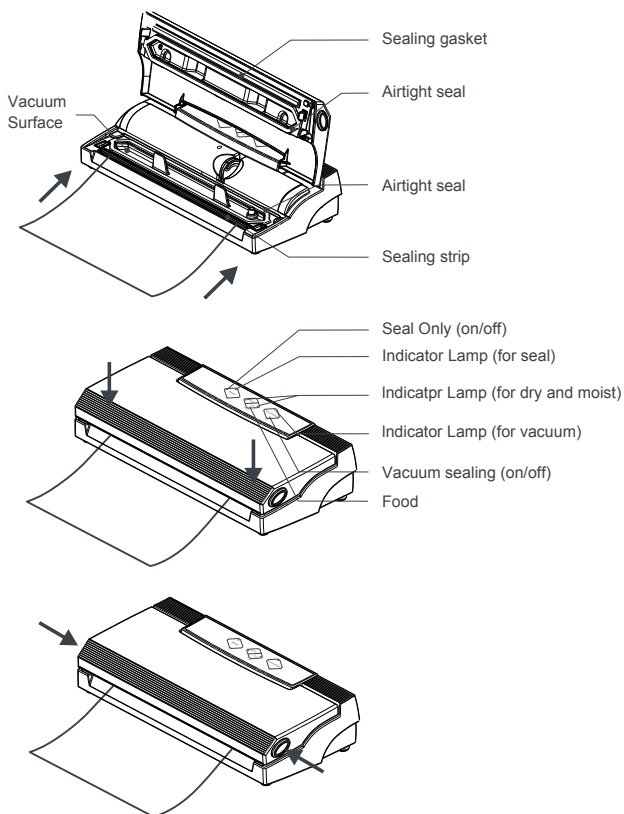

HOW TO CUT ASUITABLE BAG



1. Take out the cutter from the sealer.



2. With one hand, hold onto the bag. With your other hand, slide the cutting knife to cut the bag. Folding the bag and cutting it along the crease makes it easier to cut.



3. Use the sealer to seal one end of the bag.

HOW VACUUM-SEAL FOODSTUFF

Silver / Black / Universal



1. After putting the food that you want to preserve into the bag, put the opening end of the bag on the top of the black rubber strip, and then close the cover



2. Press the cover down heavily on both sides by the lined area using two hands - until two click sounds are heard.



3. Press the vacuum/seal button and the bag will automatically vacuum and seal. The sealer will automatically turn off when sealing is complete.



4. Press the two cover lock buttons to retrieve the vacuum-sealed bag.

HOW TO USE PUMPING HOSE

- Step 1: Wipe the vacuum sealed storage container, making sure it is clean and dry. Ensure that once the items are placed in the container, it is not too full and that there is a certain space within the vacuum cover. Connect the two ends of the suction hose to the top center hole of the vacuum cover and the machine suction hole.
- Step 2: Make sure the lid is tightly closed and turn the lid's pointer knob to the "seal" direction before vacuuming.
- Step 3: Press the "Vacuum" button to start pumping. When the machine sound stops and the "seal" indicator goes out, the vacuum is complete.
- Step 4: Remove the suction hose after the vacuum is completed and store it for next use.

NOTE: Before using the hose, please ensure that the container used is suitable for vacuum sealing.

PROCEDURE FOR SEALING MOIST ITEMS



1. Prepare the moist items to be vacuum sealed.



2. Select 'Moist' mode, then press the vacuum and seal button.



3. Wait for about 10 seconds to allow the heating wire to cool down.



4. Press the "Seal Only" button to complete the sealing.

NOTE

A small amount of gas may remain in the bag because of water vaporization when sealing moist items.

ADVICE FOR BEST VACUUM-SEALING RESULTS

1. Do not put too much food inside the bag: leave enough empty space so that the bag can be placed on the vacuuming plate more effectively.
2. Do not wet the opening end of the bag. A wet bag may be difficult to heat and seal tightly.
3. Do not vacuum-seal objects with sharp points like fish bones and hard shells! Sharp points may penetrate and tear the bag!

CAUTIONS

1. This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. After a sealing procedure, do not immediately touch the sealing bar in case you get burned by the remaining heat.
3. Keep away from hot gas, heated oven, electric burner and any other hot surfaces.
4. Make sure your hands are dry and safe to do the actions before operating.
5. Don't immerse the sealer in water or any other liquid when cleaning.
6. Do not use this appliance outdoors. It's designed for indoor use only.

FREQUENTLY ASKED QUESTIONS

Problem	solution
Vacuums well but seal function is not good.	<p>Check if the edge of the bag has any liquid, oil or any particles that are preventing it sealing.</p> <p>If yes, clean the edge of the bag and try again.</p>
	<p>Check if the heating element is damaged.</p> <p>If damaged, please replace the heating element and make sure it is installed properly.</p>
	<p>Check if the sealing strip is damaged or not installed correctly. If damaged, please replace the sealing strip and make sure it is installed properly.</p>
	<p>Check if the edge of the bag has wrinkled?</p> <p>If yes, please take out some foods so that the bags have enough space for sealing and smooth the bag mouth and try again.</p>
Sealing function is good but it does not vacuum.	<p>Check if the gasket is deformed?</p> <p>If deformed, replace it and try again.</p>
	<p>Check if the bag is placed in the vacuum chamber.</p> <p>If not, please put the edge of bag correctly into the vacuum chamber.</p>
	<p>Check if the food has any sharp angles.</p> <p>If yes, please remove or adjust the angle of the sharp part of the food.</p>
	<p>Check if the edge of bag is covering the suction hole.</p> <p>If yes, please put the bag into the correct position.</p>

CLEANING AND MAINTENANCE

1. Always unplug the unit before cleaning.
2. Do not immerse in water or any other liquid.
3. Do not use abrasive cleaners to clean the unit. for they will scratch the surface.
4. Wipe the outside of the unit with a damp cloth or sponge.
5. To clean the inside of the unit, wipe away any food or liquid with a paper towel.
6. Dry thoroughly before using again.

ETLWARNING

1. Before plugging cord into wall outlet or disconnecting it, make sure the appliance is turned OFF, and unplug from the wall outlet when not in use or before cleaning.
2. This appliance is not a toy, when used by or near children, close attention is necessary and store this appliance to a safe place, out of the reach of children.
3. Do not use any attachments not recommended or supplied, and do not use this appliance or other purposes, except its intended use.
4. Stop using the machine immediately if the cord is damaged and have it replaced by a professional.
5. Keep away from moving parts
6. Do not try to repair this appliance by yourself.
7. Do not use the appliance if it has fallen or if it appears to be damaged.
8. Do not pull or carry the appliance by its cord, use the cord as a handle, or pull the cord around sharp edges or corners. Do not operate appliance if the plug is wet.
9. Keep away from hot gasses. heated ovens. electric burner or any other hot surfaces.
10. It's better not to use an extension cord with this unit. However, if one is used, it must have a rating equal to or exceeding the rating of this appliance.
11. When disconnecting. to avoid any injury. please unplug by grasping the plug. not the cord.
12. Before plugging the appliance in or operating it, make sure your hands are dry.
13. Always place on a stable surface. such as table or countertop.
14. There is no need to use any lubricant. such as lubricating oils or water with this appliance.
15. Close supervision is required when this appliance is used near children.
16. If the supply cord is damaged, it must be replaced by the manufacturer its service agent or similarly qualified persons in order to avoid a hazard.
17. Cleaning and user maintenance shall not be carried out by children without adult supervision.
18. To reduce the risk of electric shock. this product has a polarized plug(one blade is wider than the other). This plug is intended to fit in to a polarized outlet only one way. When the plug does not fit fully into the outlet, reverse the plug. When it still does not fit, contact a qualified electrician to install a correct outlet for this plug type. Do not change or modify the plug in any way.

WARRANTY

- Your product is guaranteed by us for 12 months from your original date of purchase. If you want to extend your warranty for one more year, please do not hesitate to contact us.
- Become a KOIOS member and get access to exclusive benefits, such as updates about the latest KOIOS products.

1. Share your experience by leaving an honest review.



Please leave a review with accompanying photos or a video would be greatly appreciated!



Add photos/video

Submit

2. CONTACT US

Please scan the QR-code to start chatting (Live chat).



SCAN ME

or visit:

m.me/MyKoios

or

<http://www.mykoios.com/warranty>



mykoios.com