

TENKER

TENKER FOOT AND LEG SPA BATH MASSAGER

USER MANUAL



EXPLORE YOUR ADVENTURE

www.tenker.co/warranty

facebook.com/Tenkerofficial

ACTIVATE YOUR 12 MONTH WARRANTY & GET EXCLUSIVE GIFT

Register within 2 weeks after receiving your new product.

PLEASE VISIT NOW

→ www.tenker.co/warranty

CUSTOMER SERVICE

✉ support@tenker.co

fb @Tenkerofficial



NOTE

1. DO NOT use without water.
2. Do not put your feet near the heating plate. It is recommended to roll the massage wheel properly to prevent burns when soaking your feet.
3. DO NOT directly stand on the product.

A Big Thank You

We're thrilled that you have chosen to purchase the Foot and Leg Spa Bath Massager. At TENKER, we're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at 1-855-558-8666, or by email at support@tenker.co

Enjoy your new product!

CONTENTS

Introduction	01
Included	02
Product Specifications	02
Important Safeguard	03
Q&A	04
Product Diagram	05
Control Panel	06
Product Operation Guide	07
Massage Areas	08
Warranty & Customer Support	08
Address	08

INTRODUCTION

Thank you for purchasing the TENKER Foot and Leg Spa Bath Massager. Please read this user manual carefully and keep it in a safe place for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

INCLUDED

- 1 x Foot Spa Massager
- 1 x User Manual

PRODUCT SPECIFICATIONS

Model	MM-17C
Name	Foot and Leg Spa Bath Massager
Rated Voltage	110V
Rated Frequency	60Hz
Power Rating	500W
Net Weight	2 KG
Product Dimensions	420*360*255mm
Functions	Heat/Bubbles/Timer
Capacity	4.5-9.5L

IMPORTANT SAFEGUARD



1. Please do not use the product without water inside the tub and keep the water volume between minimum line and maximum line. Please disconnect the product from the power supply after use.
2. Please do not stand on the product or put heavy items inside it.
3. Please do not pull the power cable or pull or lift the product by the power cable, otherwise the product or cable may get damaged.
4. Please do not use the product if it is damaged.
5. Read the user manual carefully before the product is put into use.
6. Please make sure that the product is always positioned horizontally.
7. Please stop using the product if you feel unwell, such as feeling dizzy or suffering a headache.
8. Please make sure that the power cable and plug are dry and kept away from fire when the product is in use.
9. Please do not fill the tub with acidic or corrosive liquids containing particles or floccules.
10. Please do not fill the tub with water above 45 degrees Celsius to minimize the chance of scalding, as well as to prevent damage to the product.
11. People who suffer from inflammation, injuries, ringworm or burns on the feet, and women during menstruation should use caution when using the foot spa.
12. People who suffer from heart disease, terminal diabetes or serious embolism, or people who have suffered a cerebral hemorrhage, as well as pregnant women should not use the product without consulting a doctor.
13. Children, people who are disabled (both physically and mentally), elders and those who are insensitive to heat or cold are recommended to use the product only with assistance from others.
14. Please do not use this product 30 minutes before or after meals.

Q&A

Problem	Cause	Remedy
The heating function doesn't work.	The product is not connected to the power supply.	Please check and connect the product to the power supply.
The product doesn't work.	The product is not initiated properly, though connected to the power supply.	Please use the product strictly following the user manual instructions.
The product stops working during use.	The product has reached the default time limit.	Please restart the product.

PRODUCT DIAGRAM

- | | | |
|-----------------|------------------|----------------------------|
| 1. Handle | 2. Control Panel | 3. Cover Plate |
| 4. Barrel | 5. Base Plate | 6. Product Foot |
| 7. PTC | 8. Massage wheel | 9. Bubble Cover/Lamp Cover |
| 10. Storage Box | 11. Drainage | |

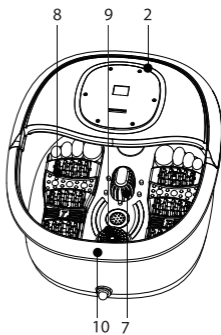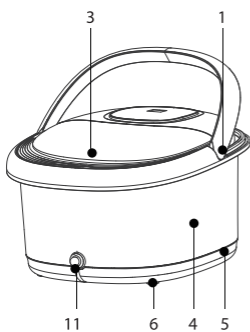

CONTROL PANEL



Temperature+

Temp+

Temp-

Red Light

Bubble

Power

On / Off

Timer

DO NO use without water. It is prohibited to stand on the tub.

PRODUCT OPERATION GUIDE

- Lay the product flat and fill it with a moderate amount of water (you can fill it with water at a temperature of 35 degrees Celsius to save time waiting for it to heat). Connect the product to a 110V /60Hz power supply and “OFF” will appear on the screen.
- Press the power button and the temperature of the water is shown on the screen.
- Press the heat button and set to your desired temperature. The temperature will rise by one degree with each press. When the temperature exceeds 48 degrees Celsius, it will revert back to 35 degrees Celsius. The default temperature is 42 degrees Celsius.
- Press the timer button to set the massage time. The default setting is 30 minutes. Each press adds 10 minutes to a maximum of 60 minutes.
- Press the bubble button to activate bubble massage and press the button again to stop bubble massage.
- Please do not use with foot spa materials such as Ay Tsao, rose petals or salts in the tub.

MESSAGE AREAS

The foot spa massager is for foot spa and foot massage only.

WARRANTY & CUSTOMER SUPPORT

For questions, assistance, support, or warranty claims, please contact us at the email address below.

ADDRESS

www.tenker.co

*Please note: TEMKER can only provide after-sales service for products purchased directly from TEMKER. If you have purchased from a different seller, please contact them directly for service or warranty issues.

ACTIVATE YOUR 12 MONTH WARRANTY & GET EXCLUSIVE GIFT

Register within 2 weeks after receiving your new product.

PLEASE VISIT NOW

→ www.tenker.co/warranty

CUSTOMER SERVICE

✉ support@tenker.co

fb @Tenkerofficial



NOTE

1. DO NOT use without water.
2. Do not put your feet near the heating plate. It is recommended to roll the massage wheel properly to prevent burns when soaking your feet.
3. DO NOT directly stand on the product.

TENKER

✉ support@tenker.co

➤ www.tenker.co

☎ 1-855-558-8666 (Mon - Fri 9:00 AM - 5:00 PM EST)

CE FC

Made in China